
SNACKY'S HOMEMADE ANTENNAS

HALF-WAVE VERTICAL DIPOLE

11-metre CB | 27.355 MHz | Centre-fed

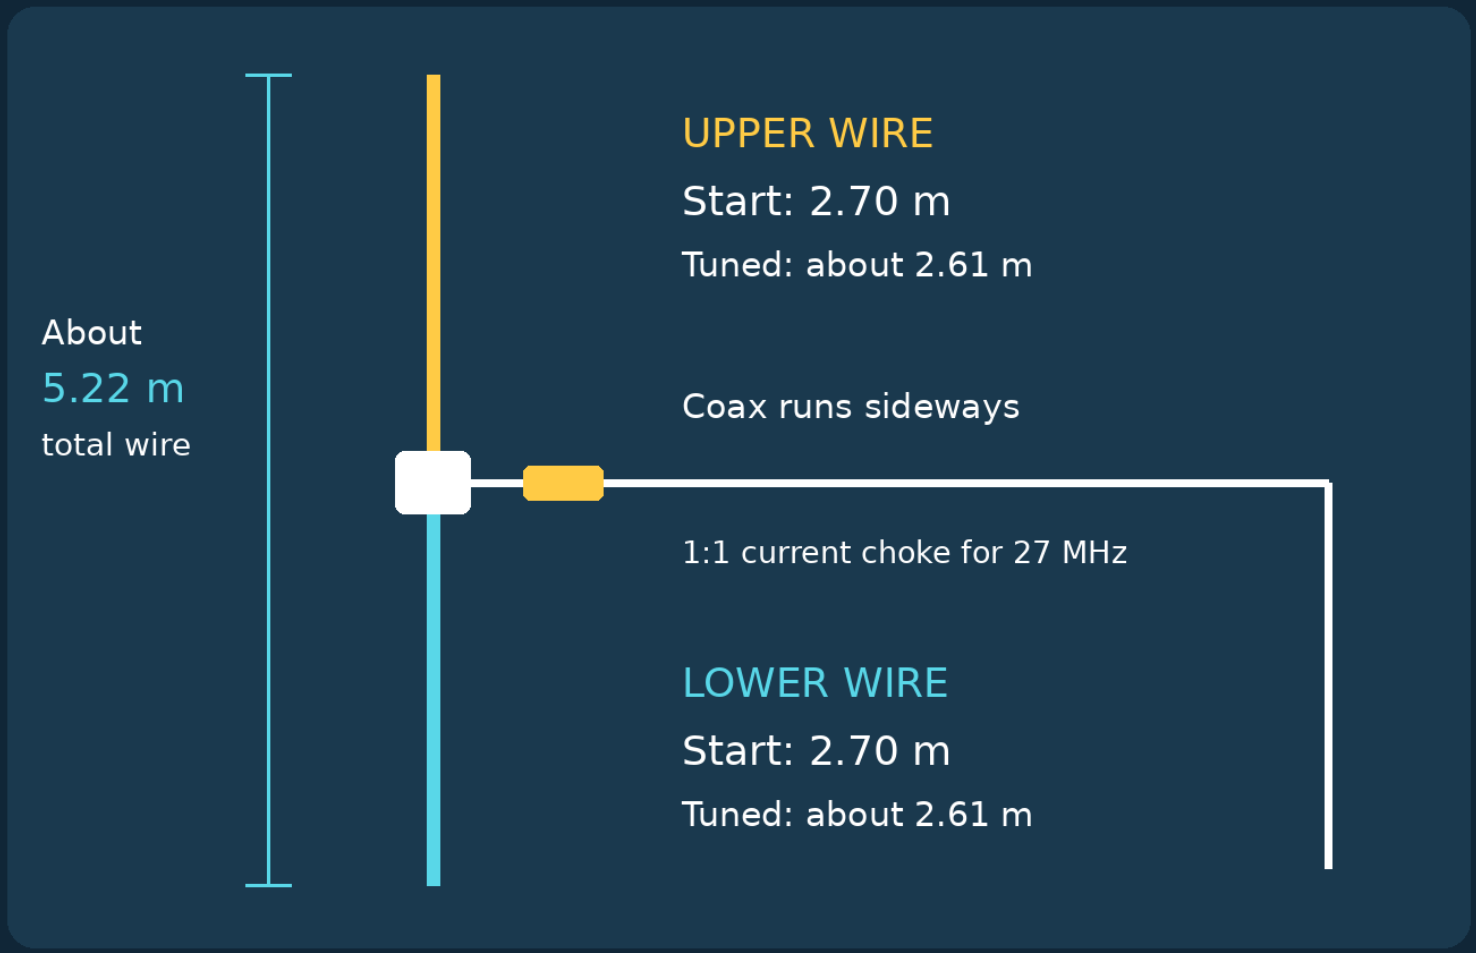

CONNECT THE COAX

Centre conductor -> upper wire

Shield / braid -> lower wire

Keep the two terminals electrically separate.

BUILD & TUNE

Use a fibreglass support. Insulate both wire ends.

Trim both ends equally while checking SWR.

Final length depends on wire and installation.

Keep clear of powerlines, including the fall radius.

Diagram not to scale. Full instructions are on the antenna page.